


# IP65 LED Spotlight Installation Instructions

## Installation steps

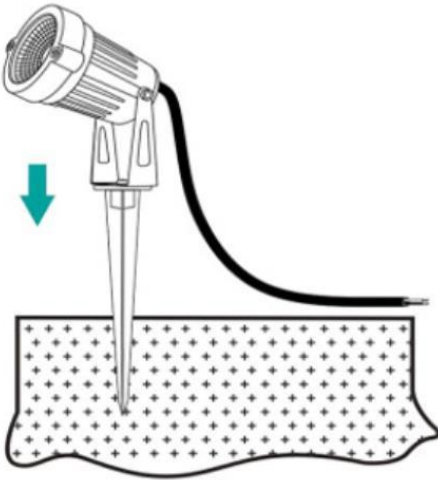


1. Put the spike into the soft ground.
2. Use the provided screws to fix the lamp body to the spike.
3. Connect the wires, double check the connections before turning on the light.
4. Adjust the angle of the lamp body, tighten the fixing screws, finally power on and test.

### Note:

1. Use the correct input voltage;
2. Cut off the power supply before installation and maintenance;
3. Do not disassemble the lamps at will, otherwise the lamps will not be waterproof;
4. The waterproof level of the cable interface must reach IP65 or above;
5. Do not install in very humid areas or near cables, water or gas pipes.


## Connection (AC100-240V)

BROWN-L  
 BLUE-N  
 GREEN/YELLOW-E

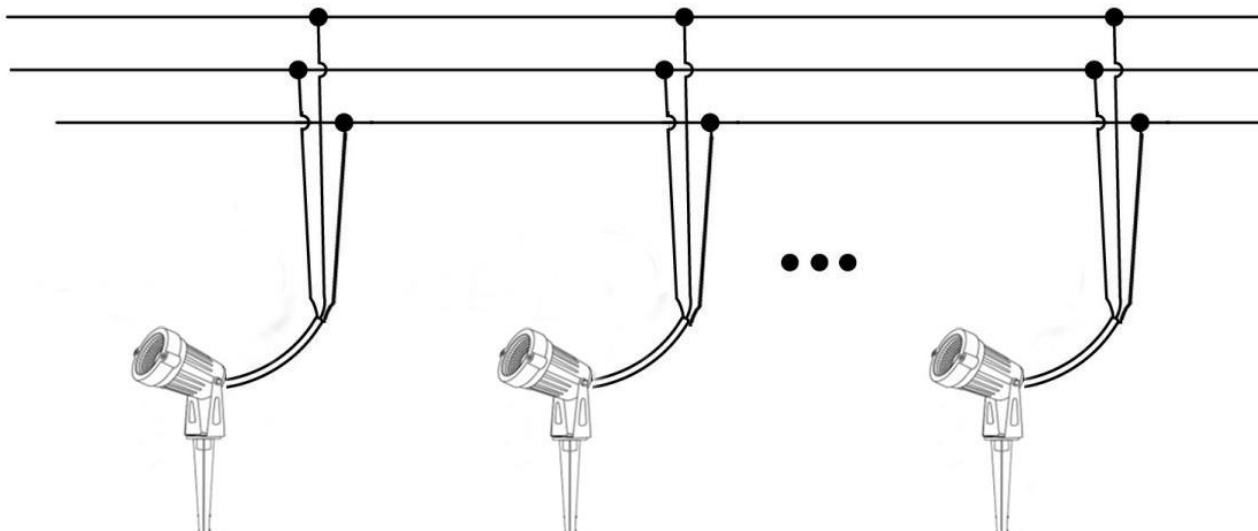

# IP65 LED Spotlight Installation Instructions

## Waterproof treatment (don't put joint part in water)

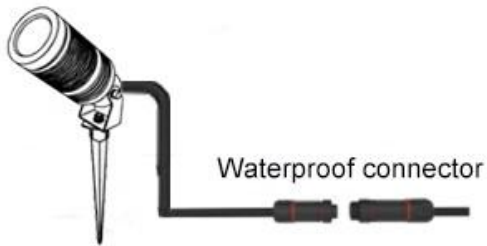

\*\*\* It is recommended to use IP65 or above waterproof connector for the cable interface, please make sure that the thread is tightened to prevent water from entering the connector due to misoperation.

### **Caution:**

1. Only professional people to make installation, pls check the fixture well before installation.
2. Pls install the lights according to this datasheet carefully, screw the light well and connect the wire correctly.

### **Warning:**

- \*Neglect on action of the above treatment will lead to failure of waterproof and proper working of the lights!!
- \*Make sure the ground connection well avoid electric shock, due to metal housing.

**Note: The above instruction are subject to update or improved without notice. Pls turn to our staff for further details ! Thanks for your long term support !**